



2




5" above floor


3A

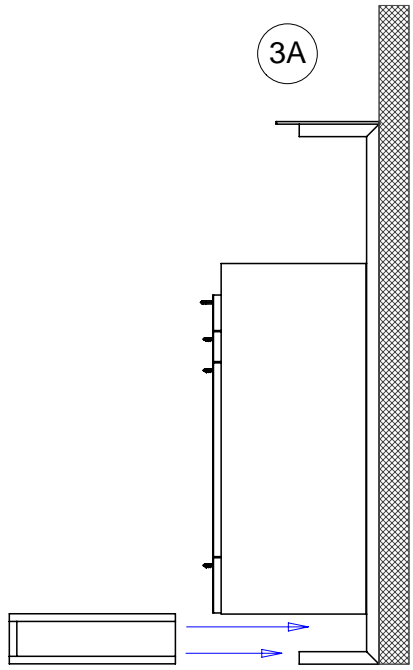

3B

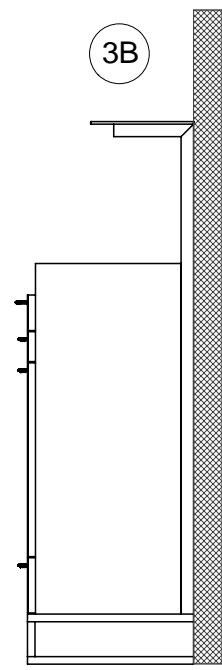

4

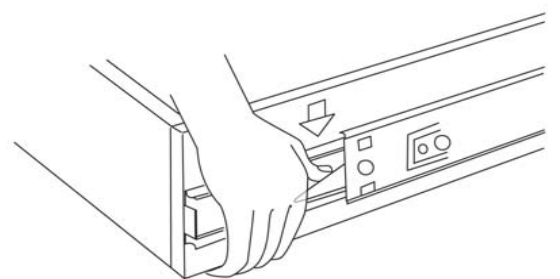


To Remove Drawer
 Pull the drawer fully open so levers are visible. Push "down" on the right lever (shown), and "up" on the left lever. Holding levers in place, pull drawer toward you.

To Reinsert Drawer
 Bring ball retainer fully forward and carefully reinsert drawer member slide into the cabinet member slide, guiding the drawer member raceway between the ball bearings. Completely close drawer. Open and close drawer to ensure the slide is fully engaged into the ball bearing track.

Cabinets should be attached to wood framed walls by screwing through the interior back panel into wall studs or blocking. Fasteners for wood framed walls are provided. The fasteners for other wall types are not provided.

5

3" wood screw with beauty washer

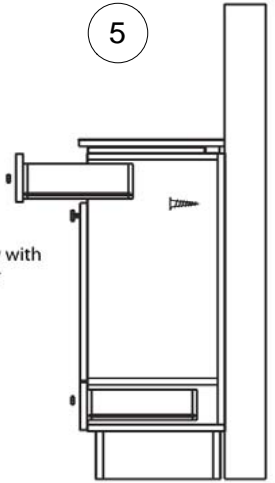

Attaching Cabinet to Wall

Use the following procedure to unpack and install your new vanity:

- 1) Remove cabinet from packing materials, retain the wood shipping box the item was placed on in transit to aid in wall mounting.
- 2) Locate the 32" x 7 1/2" x 1 1/4" wall cleat. Use the supplied 3" screws with no washers to secure the cleat to the wall raised 5" as shown in diagram #2. Ensure that the screws are positioned over a wall stud.
- 3) Place the vanity with the cleat between the two metal legs and slide the shipping / installation box underneath for support.
- 4) Remove the breadboard and upper drawer using the procedure in diagram #4.
- 5) Using the supplied 1 1/2" screws and finish washers to secure the the cabinet to the wall cleat. After attachment remove the shipping / installation box from under the cabinet and discard.

Finish Schedule - 961-15

- Face Color -
- Top Color -
- Toe Color -
- Reveal / Accent Color -
- Hardware - Enova Pulls
- Interior - Black
- Other (Specify) -

General Notes:

1. All counter tops are to be made removable wherever possible.
2. Items must be broken into manageable sections For Shipping. Mark For Ease Of Reassembly.
3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
4. Purchased items Must Be Trial Fit Before Shipping.

Collins Collins Manufacturing
 2000 Bowser Road
 Cookeville, TN 38506

Title: **961-15 Install**

Size: NTS	Drawing Number: Job	Drawn By: Zane
Date: 10/11/07	Sheet 5 of 7	